

### TIRE CHANGERS

#### Leverless Tire Changer



Center Clamping (30" max)  
2 Assist Arms  
Integral Wheel Lift

Electric Motor - 115V  
17" Rim Width  
47" Tire Diameter

**Universal 2**

#### Rim Clamp Tire Changer



Swing Arm Tower  
24" External Clamping  
Upgradeable to 28" External

Electric or Air Motor  
18" Bead Breaker  
15" Rim Width  
50" Tire Diameter (42" for EM)  
"EM" Includes EasyMont Pro Assist With Three Helper Arms

**1625 / 1625EM (shown)**

#### Rim Clamp Tire Changer



Swing Arm Tower  
21" External Clamping  
Upgradeable to 26" External

Electric or Air Motor  
18" Bead Breaker  
15" Rim Width  
50" Tire Diameter

**1620**

#### Rim Clamp Tire Changer



Swing Arm Tower  
21" External Clamping  
Upgradeable to 26" External

Electric or Air Motor  
14" Bead Breaker  
13" Rim Width  
40" Tire Diameter

**1565**

#### Rim Clamp Tire Changer



Swing Arm Tower  
18" External Clamping  
Upgradeable to 22" External

Electric Motor - 115V  
13" Bead Breaker  
13" Rim Width  
40" Tire Diameter

**1520**

#### Center Post Tire Changer



Up to 18" Wheel Size

Air Power  
5.6 gallon Surge Tank  
20" Rim Width  
40" Tire Diameter

**2700**

### TIRE CHANGER ACCESSORIES - 1625 / 1620 / 1565 / 1520

Clamp Set, to 28" Ext. (1625) **EAA0332G91A**  
Clamp Jaw Covers, Set of 4 (1625 only) **4027645**

Clamp Set, to 26" Ext. (1620/1565) **ST4029446**  
Clamp Jaw Covers, Set of 4 (1620/1565/1520) **4027870**

Duckhead Inserts - Mount/Demount **00087456**

Plastic Duckhead - head only **0024335**